

PROGRAMMING GUIDE FOR USE WITH TOWEL WARMERS

Introduction - the instructions below are specifically related to towel warmer control and intended to simplify programming.

TO CLEAR THE PROGRAMMER

1. Press and hold down the **ON/OFF** button.
2. Using a paper clip or pen, press and release the **RESET** button which is to the lower right of the **+** button.
3. Continue holding the **ON/OFF** button until INIT is displayed on the screen.
4. Release **ON/OFF**.
5. Wait until 12:00 flashes on the screen.

SETTING THE TIME, DATE AND PROGRAMMING

1. Press **MODE** to display SETUP
2. Press **ON/OFF** to display HOUR. Use + or – buttons to set hour.
3. Press **ON/OFF** to display MIN. Use + or – buttons to set minutes.
4. Press **ON/OFF** to display YEAR. Use + or – buttons to set year.
5. Press **ON/OFF** to display MONTH. Use + or – buttons to set month.
6. Press **ON/OFF** to display DATE. Use + or – buttons to set date.
7. Press **ON/OFF** and make sure that the correct day is displayed.
8. Press **MODE** button.

SETTING ON AND OFF PROGRAM TIMES (up to 40 options)

Please note: DUSK or DAWN settings are not needed for towel warmer control and if they flash on the screen at any time whilst setting your program, press the + button until the time flashes on the screen.

1. Press **MODE** button until PGM is displayed.
2. Press **ON/OFF** button – program # will flash. Use + or – button to select program #.
3. Press **ON/OFF** button and use + or – button to select ON or OFF time or SKIP (SKIP is used to cancel a program). Press **ON/OFF** button to save this selection.
4. Press **ON/OFF** button and use + or – buttons to set the hour for the first ON time.
5. Press **ON/OFF** and use + or – buttons to set the minutes for the first ON time.
6. Press **ON/OFF** and use + button to select the days for this program. (Select from ALL, M-F, WeeKenD or individual day). Press **ON/OFF** to save the program.
7. Repeat from step 2 and select the next program # to program the first OFF time.
8. When programming is complete, press **MODE** until AUTO appears in the screen.

A light bulb symbol in the top left corner of the screen indicates whether the program is on or off.

To use the programmer manually, press **MODE** until MAN is displayed and press the front cover for the switch.

If the front cover is pressed whilst in AUTO mode the program will be advanced to the next cycle.