


# IN-WALL DIGITAL TIMER MECHANICAL

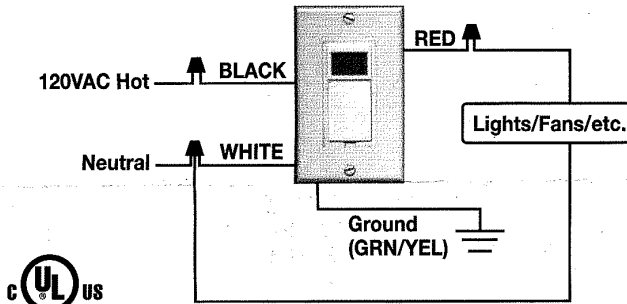

IIIWoods®

## Model 59018/59028 7-Day Digital Timer



### Setting Current Time:

1. Press and hold the "CLOCK" key during this entire procedure.
2. Press the "HOUR" key to advance the hours.
3. Press the "MIN" key to advance the minutes.
4. Press the "DAY" key to advance the day.
5. If any keys are pressed for a prolonged period, the display will advance rapidly.
6. Release the "CLOCK" key once the time and day have been entered. Now the timer is in operation and ready to be programmed. The colon ":" after hours will continuously flash indicating that the time is advancing.

### Programming ON/OFF Events:

1. Press the "PROG" key once. TIMER 1-ON --:-- appears.
2. Using the "HOUR" and "MIN" keys enter the desired ON time. By default all days are indicated. When complete press the "PROG" key once.
3. Timer OFF --:-- will be displayed. Using the "HOUR" and "MIN" keys enter the desired OFF time. By default all days are indicated. When complete press the "PROG" key once.
4. If complete press the "CLOCK" key to return to current time and day.
5. Note that a total of 7-ON and 7-OFF events can be programmed.

### Block Programming:

1. When programming ON/OFF events, all days are indicated by default. To change the day selection simply keep pressing the "DAY" key and the display will change as follows:
2. Individual Day (MON, TUE, etc.)
3. MON-FRI; SAT-SUN; MON-SAT; MON-SUN
4. MON-WED-FRI; TUE-THU-SAT
5. MON-WED; THU-SAT
6. Follow the steps above to complete programming.

### Reviewing Programs:

1. To review the programs that have been entered simply press and release the "PROG" key. Each time you do this you will be able to scroll through the programs.
2. Any program can be edited simply by pressing the "HOUR", "MIN" and "DAY" keys. Then press the "PROG" key in order to accept the changes.
3. When complete press the "CLOCK" key to return to the current time and day.

### Deleting Programs:

1. To delete a particular program simply press the "PROG" key until the desired program is displayed.
2. Then press the "HOUR" and "MIN" keys until --:-- is displayed. Then press the "PROG" key in order to delete this particular program.
3. When complete press the "CLOCK" key to return to current time and day.

### Installation Procedure:

1. Wire in accordance with National and Local Codes.
2. Turn power OFF at circuit breaker or fuse.
3. Remove and disconnect the existing switch.
4. Connect TIMER wire leads to LOAD as indicated.
5. Restore power at circuit breaker.
6. Verify slide switch is set to TIMER.

### Power-Up Sequence:

1. Lift up the bottom of the door using a small slotted screwdriver.
2. Position the slide switch to TIMER.
3. Press the "RESET" button using a paper clip.
4. The display should flash 12:00AM on Monday.

### In the event that the screen is blank, check the following:

1. The OFF/TIMER switch located at the bottom may be in the OFF position. Slide it to the TIMER position using a small screwdriver.
2. Check LOAD connected to the TIMER.
3. Check the 120VAC power source.

**WARNING: INSTALLATION  
SHOULD BE MADE BY A  
LICENSED ELECTRICIAN.**

### Electrical Ratings:

120V / 60Hz  
15A / 1800W Resistive  
(general purpose)  
15A / 1800W Tungsten  
(lighting)  
1 HP

\*When done programming,  
close door

### Manual Override:

Pressing the TIMER will alternate the unit ON and OFF.

### Initial Setup:

When you initially program the unit it may be necessary to press the manual override key as the unit will not look back to determine if it should be ON. For example if the current time is 2:00PM and you just programmed the unit to turn ON at 1:00PM, you will need to press the manual override key to turn it ON. Thereafter, the unit will resume normal operation (automatic).

### Memory Backup:

The TIMER is equipped with a rechargeable Ni-Mh battery which will protect your programs during power failure for up to 30 days. No need to replace battery.

*Note that the screen blanks during a power failure.*



Coleman Cable, Inc.  
Waukegan, IL 60085  
© 2008 Coleman Cable, Inc.  
Printed in China